

INSTRUCTION

Attention:

This adapter/bracket is an "exchange" adapter that makes it possible to replace the original mounted armrest with a "MLC310" centre Comfort armrest - which will offer you a more convenient drive due to it's adjustable features and practical storage compartment box.

Please note that this adapter only is adaptable with the armrest type "MLC310" and only can be mounted on seats that already is equipped with an original mounted armrest.

For more information about adapters suitable for other type of seats -please contact your dealer or visit Comfort's official homepage where you will find information about adaptations for more than 200 different car models.

www.armrest.info

Innehåll / Content / Inhalt:

1 st MLC310 Armrest (PV10)
1 st Adapter plate /Bracket
1 st Cover-ring
1 st M10x16 screw (M1,25)
1 st Plastic Cap (D16/10, PVC)
1 st Plastic Cap (K8PVC)

SMI Part No (kit):

19-310PT10-X9R

19-310PV10-X9R

Bil/ Car/ Auto Model: År / Year / Jahre:

Toyota	Verso-S	2011 -
	Yaris III	2011 -

Adapter No: FS1930-F009R/L

Tillverkad av /Manufactured by/ Hersteller:

Sydmeke Industri AB

Santessonsväg 3, 232 61 Ärlöv, Sweden
Phone: +46 40 83640, Fax: +46 40 89090
E-mail: office@sydmeke.se
Homepage: www.sydmeke.com


Comfort
ARMREST SYSTEM

R-registered trademark of Sydmeke Industri AB

Kit Content X-change Adaption

**Adapter plate / Bracket
with cover-ring (pre-mounted)**

**MLC310 Armrest
with adjustment & storage compartment**

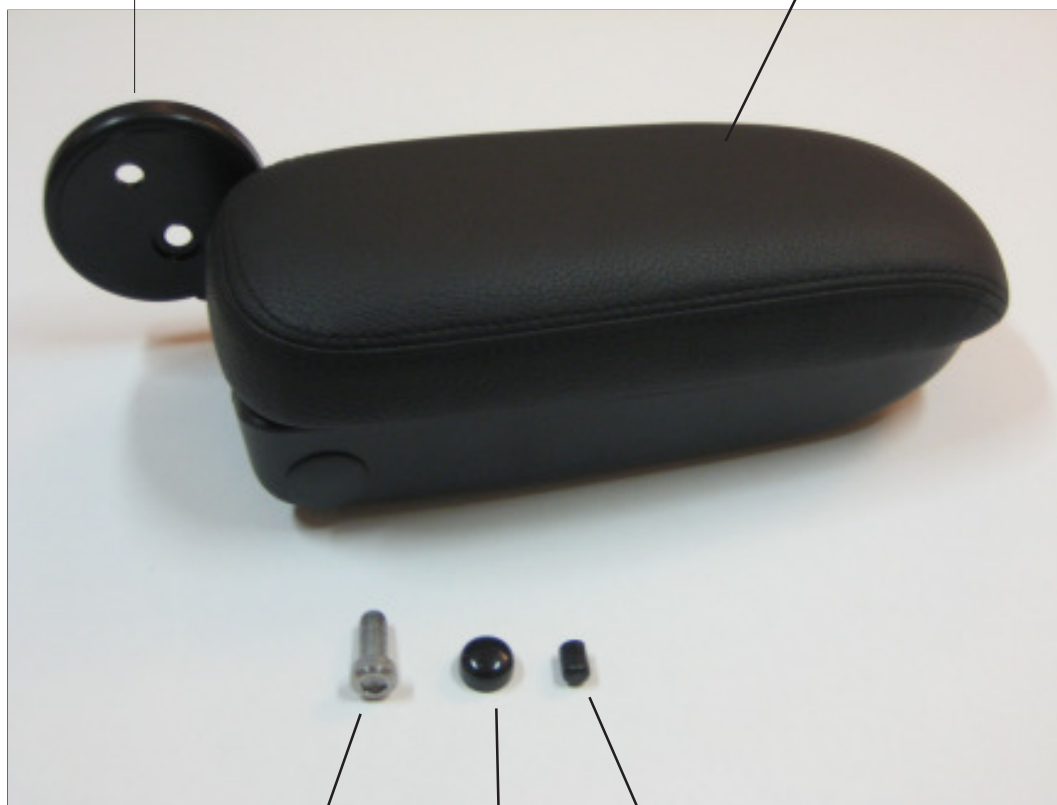

**Hex-screw
(M10x1,25x25)**

**PVC cap 2
(for M10)**

**PVC cap 1
(for axle-pin)**

If you have any questions regarding the mounting procedure or want to learn more about the Comfort Armrest System -please contact your dealer or Sydmeke directly for further assistance.




Mount the armrest like this:




Remove the original armrest by using a screwdriver to pull out the plastic cover.




Use a 14 mm box-spanner to loose the centre bolt on the armrest.

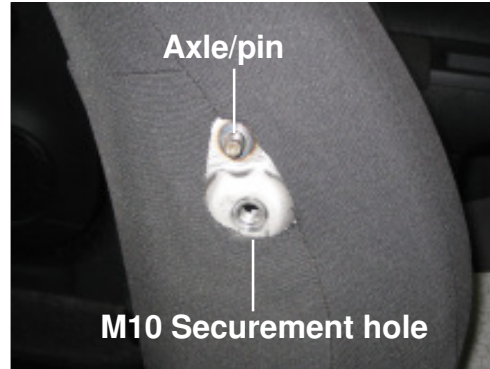


Remove the armrest and locate the two fastening points -the axle/pin (8 mm) and the securement hole (M10).

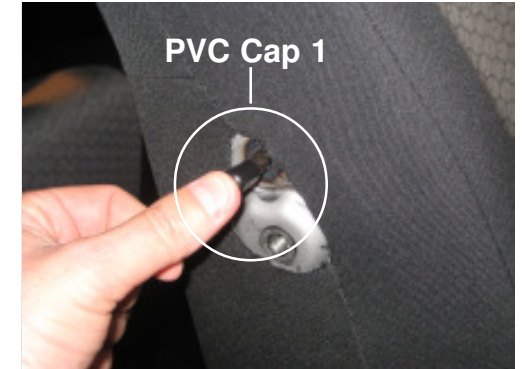

Mount the enclosed plastic cap (No: 2) over the axle pin (make sure to push it all the way in).

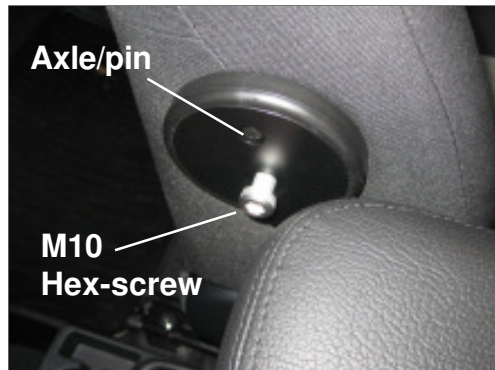

Mount the armrest /adapter bracket over the axle/pin and in line with the securement hole. (if necessary -adjust the adapter bracket backwards so that you can mount the M10-screw into the adapter). Tighten the M10-screw with a 8 mm hex-wrench and then cover the screw with the plastic cap.

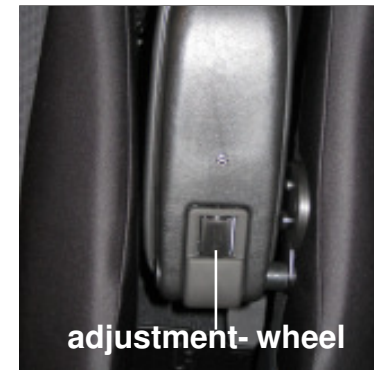

Now you can fold the armrest up and down and adjust the armrest into a nice and relaxing position -by turning the adjustment wheel on the underside of the armrest. Pull up the handle at the front of the armrest to access the practical compartment box.